



Entering a Code into your WR3

Please note that a code is only valid on the day it is issued.

You will be provided with two codes, the first will be a reset code and second will be a subcode

Ensure that the Handset is connected & powered up, and then complete the following steps:

- Press and hold the left button to enter the options menu.
- Scroll through the options menu by pressing the left button until “**RESET**” is displayed on the screen then press the right button to enter.
- “0000 OK?” will be displayed.
- To enter the four digits Daily RESET Code as provided by Guardian;
 - Press the right button until the correct numerical value for the first number is correct (ie. 4 presses = the number 4).
 - Then press the left button to move to the next number. Continue this process for all 4 digits in the provided code.
 - Once all 4 numbers are correct press the left button until the cursor is under the “**OK?**” Press the right button to accept the entry.
- “SUBCODE” will be displayed, repeat above steps with the second code supplied to enter Subcode.



Entering a Code into your LR

Please note that a code is only valid on the day it is issued.

You will be provided with two codes, the first will be a reset code and second will be a subcode

Ensure that the Handset is connected & powered up, and then complete the following steps:

- Press and hold the left button to enter the options menu.
- Scroll through the options menu by pressing the right button until “RESET” is displayed on the screen then press the bottom button to enter.
- “RESET CODE” and “0000 OK?” will be displayed.
- To enter the four digits Daily RESET Code as provided by Guardian;
 - Press the right or left button until the correct numerical value for the first number is correct (ie. 4 presses = the number 4, left will decrease numbers, right will increase numbers).
 - Then press the bottom button to move to the next number. Continue this process for all 4 digits in the provided code.
 - Once all 4 numbers are correct press the bottom button until the handset displays “Cancel” “Accept” or “Correct”. Press the right button to accept the entry.
- “SUBCODE” will be displayed, repeat above steps with the second code supplied to enter Subcode.

